



THANK YOU FOR PURCHASING THE INCREDIBLE XHOSE!

The XHOSE is a revolutionary hose that automatically expands up to 3 times its original length when the water is turned on and automatically contracts back when the water is turned off. The XHOSE is extremely lightweight and will eliminate the drudgery of using heavy, bulky conventional hoses.

STOP!

PLEASE READ THE INSTRUCTIONS AND THE IMPORTANT INFORMATION BELOW BEFORE USING YOUR XHOSE

NOTE: The XHOSE works best with a spray nozzle (not included). When used WITHOUT a spray nozzle the XHOSE will contract several feet or more when the water is turned on. **Also, it may take several cycles of expansion and contraction for the XHOSE to expand to its full length.**

INSTRUCTIONS:

1. Before using your XHOSE make sure the rubber washer is firmly set inside the female coupling. This will prevent leaking.
2. Attach the female end of the XHOSE to the water source.
3. Attach the supplied on/off valve to the male end of the XHOSE.
4. The XHOSE works fine without a spray nozzle. However, for best results, attach a spray nozzle, (not included) to the male threads of the on/off valve
5. Turn the on/off valve to the OFF position.
6. Turn the water on at the source. Gradually increase the water pressure. The XHOSE will automatically expand up to 3 times its original length.
7. When the XHOSE is fully expanded, turn the on/off valve to the ON position and use the XHOSE like any ordinary hose.
8. When you are finished using the XHOSE, **make sure to turn the water OFF at the source spigot.**
9. Turn the on/off valve to the ON position and allow the water in the XHOSE to drain. If you are using a nozzle then open the nozzle. As the water begins to drain from the XHOSE, it will automatically contract back.

IMPORTANT INFORMATION

This hose is intended for routine watering applications

- Do NOT leave the water turned ON with the XHOSE under pressure when not in use. Always turn the water OFF and drain the water from the XHOSE after each use so that your XHOSE contracts back to a small size.
- The outer webbing protects the inner expandable hose. Therefore, take care that the outer webbing is not cut, torn or punctured.
- Do not run hot water through this hose
- Drain your hose in the summer when you are not using it and keep it shaded as much as possible.
- Protect your XHOSE from harsh winter weather by storing it indoors. Be sure to drain the hose completely before storage as water remaining in the hose can freeze, damaging the hose.



USING YOUR XHOSE WITH A SPRINKLER

INSTRUCTIONS

1. Turn the on/off valve at the end of your XHOSE to the OFF position.
2. Turn the water on at the source and your XHOSE will expand to its maximum length.
3. Attach your sprinkler to the on/off valve.
4. Place your sprinkler in the desired place in your yard or garden
5. Point the sprinkler nozzle away from you and turn the on/off valve to the ON position and walk away. Your sprinkler will work the same way it works with any ordinary hose.

NOTE: if you are using a sprinkler that is NOT attached to the ground, (such as an oscillating sprinkler), when you turn the water OFF, your sprinkler may be dragged a short distance as the XHOSE contracts back to its original length. This should not harm your XHOSE or your sprinkler

WARNING

THE XHOSE IS NOT INTENDED FOR DRINKING WATER USE

Do not drink from this hose. The XHOSE is a tool that is used and stored outdoors and can be exposed to conditions that can be harmful to humans such as:

- Mold & bacteria
- Lawn and Garden chemicals
- Animal waste
- Insects
- Stagnant water
- Other harmful substances

WARNING

THE XHOSE IS NOT A TOY

Do not stretch or expand this hose when it is empty. The XHOSE is intended to expand only when the water is turned on. This hose can stretch to up to three times its "relaxed" or original length and if it is stretched with NO water in it and accidentally released, it will quickly snap back and could possibly cause personal injury.